

I'm not a bot





































[illegible]



can be released to assist in cleaning. Always keep the grill dish and grill dish insert clean, as any fat deposits may catch fire. Ensure that fats and oils do not accumulate around the grill element. The grill element can be released to assist in cleaning the top of the grill cavity. Cleaning your oven accessories Removing the trays and shelves from your appliance + Slide the dish and shelves towards you until they reach the front stop. + Tilt them up at the front to clear the side supports, taking care not to spill the contents. + For separate grill underbench model (WVE655), open the grill door and pull out the grill slide to its full extent. Carefully lift the dish from the support. + Lift the dish and shelves clear. + 1 Wash the dish, insert and shelves in hot soapy water. + Reverse the above steps to put the grill tray and shelves back again. + Ensure that they are placed between the 2 support wires. CAUTION: Do not remove the slide mechanism on the separate grill underbench model (WVE655). The grill dish can easily be removed for cleaning. Removing the side racks Grasp the middle wire at the front. Pull firmly inwards while pushing back. Slides (Telescopic runners) Do not subject slides to temperatures greater than 300°C. Do not place slides in a dishwasher Do not use a knife or sharp object to clean slides. Do not add oil or any other lubricant to slides. Removing and replacing the oven back light and side light (where fitted) Turn oven light glass anticlockwise to remove it for globe replacement. To remove side light, place a spoon under the light glass and lever off. Replace globe and snap glass cover back into position. Aspecial high temperature resistant globe should be used. This can be purchased from Electrolux Customer Care Centre. NOTE: :Light globes are not covered by warranty WARNING: Make sure the appliance is turned off before you remove or replace parts, to avoid the possibility of electric shock. Retaining wire models - The upper grill element is secured with a hanger clip which can be removed to help clean the oven cavity ceiling. To remove the hanging clip push the sides of the clip in the direction of the arrows. After cleaning, raise the grill element and secure clip back into position. NOTE: Diagram shows a grill in oven model. The procedure is the same for separate grill models which use the same hanger clip in the grill compartment. Rotating latch models - rotate latch 180 degrees and the grill element will drop down freely. After cleaning, raise the grill element and secure by rotating the latch back 180 degrees. Cleaning the triple glazed oven door (on selected models) CAUTION: Do not lift the door by the handle, Rough handling will cause glass to break. Removing the oven door IMPORTANT TIPS: Your oven is equipped with a door that can be disassembled in order to clean all the panes of glass. Remove the door before cleaning. • Open the door fully to access the hinges then rotate the 'stirrups' on both hinges fully towards the oven. • Slowly close the oven door until it stops against the 'stirrups' (about 45°). • Grasp the oven door with a hand each side of the door and remove it from the oven by pulling it towards you. • Lay the oven door with the outer side facing downwards on something soft and flat (for example a blanket on a kitchen table) to prevent scratches. Removing oven door top trim • Take hold of the grid embossed sections of the door trim at each end and press inwards to release the clips. Remove the door trim by pulling it towards you. Removing the door glass panels CAUTION: Rough handling, especially around the edges can cause the glass to break. • Lift the black bordered glass panel out of the guide and place on something soft and flat to prevent scratches. • Repeat this for the smaller clear glass panel (when fitted). Cleaning the door glass panels CAUTION: Do not to use harsh abrasives on the glass panes as the reflective surface plays a role in the function of the oven. Do not place glass in dishwasher. Hand wash only with a soft cloth and warm soapy water. When dry polish with a soft cloth and ensure the glass is dry before reassembly. Removing bottom trim (on selected models) • The bottom trim may be removed for cleaning by snapping out and lifting away from the glass. Re-assembling the bottom trim (on selected models) • Push down to "snap" each side of bottom trim back into door columns. Re-assembling the door glass panels • Insert the smaller clear glass panel (when fitted) first from above and at an angle to the profile of the door. • Repeat for the black bordered glass panel ensuring the painted surface is facing to the downside. Re-assembling the top door trim • Take hold of the top door trim at each side and position it to the inside edge of the glass. • Push the trim down with its top edge over glass panel until the clip snaps in on each side of the trim. • Push the middle of the trim down to ensure it is straight and firm against the glass panel. Fitting the oven door • Take hold of the oven door with a hand on each side and with the door at an angle of 45o position the recesses at the bottom of the door onto the hinge arms of the oven. Let the door slide down the hinge arms as far as it will go. • Open the door fully to access the hinges. • Rotate the stirrups (see image below) until they lock into the hook. The oven door may now be closed. Cleaning the quad glazed oven door (on selected models) CAUTION: Do not lift the door by the handle. Rough handling will cause glass to break. Removing the oven door top trim • Take hold of the grid embossed sections of the door trim at each end and press inwards to release the clips. Remove the upper door trim by pulling it towards you. Removing the door glass panels CAUTION: Rough handling, especially around the edges can cause the glass to break. • Lift the black bordered glass panel out of the guide and place on something soft and flat to prevent scratches. • Repeat this for the smaller clear glass panels. • When removing panel 3, ensure that the two rubber spacers are removed before cleaning. Do not misplace them! Cleaning the door glass panels CAUTION: Do not use harsh abrasives on the glass panes as the reflective surface plays a role in the function of the oven. Do not place glass in dishwasher. Hand wash only with a soft cloth and warm soapy water. When dry polish with a soft cloth and ensure the glass is dry before reassembly. Re-assembling the quad glazed oven door (on selected models) Re-assembling the door glass panels • Assemble the silicone spacers to the upper corners of one of the clear glass panels. Position the panel into the lower position of the door, ensuring the chamfered corner of the panel is placed in the correct location as shown in the image below. • Insert the remaining smaller clear glass panel into the middle position, ensuring the chamfered corner of the panel is placed in the correct location as shown in the image below. Replacing the top door trim • Hold the top door trim at each side and position it to the inside edge of the glass. • Push the trim down with its top edge over the glass panel until the clip snap in on each side of the trim. • Push the middle of the trim down to ensure it is straight and firm against the glass panel. Fitting the oven door • Take hold of the oven door with a hand on each side and with the door at an angle of 30°, position the recesses at the bottom of the door onto the hinge arms of the oven. Let the door slide down the hinge arms as far as it will go. • Open the door fully to access the hinges. • Rotate the 'stirrups' (see the image below) until they lock into the hook. The oven door may now be closed. Cleaning the side open door (on selected models) Side open door models have been designed to allow for the inner glass panels to be removed for cleaning. Removing side open door top trim Take hold of the grid embossed sections of the door trim at each end and press inwards to release the clips. Then remove the door trim by lifting it upwards. CAUTION: Do not lift the door by the handle. Rough handling will cause glass to break. Removing the door glass panels CAUTION: Rough handling, especially around the edges can cause the glass to break. • Take hold of the black bordered glass panel with a hand on its upper and lower edge. Lift and rotate the glass around the retainer to remove it from the guide. • Repeat this for the smaller clear glass panel (when fitted). • Take hold of the smaller clear glass panel (when fitted) with a hand on its upper and lower edge. Lift the glass to remove it from the retainer. • The rubber moulding on the upper corner of the small clear glass panel may be removed. Please take care that it is not misplaced. Cleaning the door glass panels CAUTION: Do not to use harsh abrasives on the glass panes as the reflective surface plays a rôle in the function of the oven. Do not place glass in dishwasher. Hand wash only with a soft cloth and warm soapy water. When dry polish with a soft cloth and ensure the glass is dry before reassembly. Re-assembling the side open oven door (on selected models) Re-assembling the door glass panels • Ensure the rubber moulding is placed in the correct orientation on one of the upper corner of the smaller clear glass panel. • Insert the smaller glass panel (when fitted) first from above and at an angle to the profile of the door • Repeat for the black bordered glass panel ensuring the painted surface is facing towards the outside of the door. Replacing top door trim • Take hold of the top door trim at each side and position it to the inside edge of the glass. • Push the trim down with its top edge over glass panel until the clip snaps in on each side of the trim. Pyrolytic Cleaning of the Oven Cavity (WVEP615, WVEP617, WVEP618 & WVEP627 models only) The oven has the Pyrolytic self-cleaning function, it cleans by burning off the spatters and accumulated dirt and grease from the oven liner, at high temperature. This process produces ash which can then be wiped out of the oven cavity. It is recommended you clean your oven regularly to keep the oven in its best condition. • Light clean - this is an energy saving cycle that can be used on a regular basis if the oven is lightly soiled. Possibly after every 2nd or 3rd roast. • Normal clean - use this as the regular cycle about once every 2-3 months. Before carrying out the Pyrolytic cleaning function WARNING • Clean large deposits, spills or grease from the oven cavity. • Please keep small children at a safe distance. The appliance becomes very hot. • Never clean non-stick baking trays and tins in the oven during the pyrolytic cycle. High temperatures damage the non-stick coating and poisonous gas is released. • Pyrolytic cleaning can release fumes that are not harmful to humans, including infants or persons with medical conditions, however you are strongly advised to provide good ventilation during and after each pyrolytic cleaning process. • Unlike humans, some birds and reptiles can be extremely sensitive to the potential fumes emitted during the pyrolytic cleaning process. It is strongly advised to remove any pets (especially birds) from the vicinity of the appliance during and after each pyrolytic cleaning process. • Small pets can also be highly sensitive to the localized temperature changes in the vicinity of all pyrolytic ovens when the pyrolytic self cleaning process is in operation. CAUTION • All accessories must be removed from the oven, including shelves, trays and side racks. • During pyrolytic cleaning the air outlet vent above the door must be kept clear of any obstruction (e.g. tea towels). • Do not use your oven to clean miscellaneous items (e.g. cookware). • To prevent damage, do not use acids, sprays or similar cleaning agents. IMPORTANT During the pyrolytic cleaning function, it is advisable not to use a cooktop if it is fitted above the oven. This could cause overheating and damage to both appliances. The cooling fan will operate at an increased speed for pyrolytic cleaning and will continue to run until the oven has cooled down. It is recommended to use the Pyro clean function regularly to keep the oven in its best condition. Starting the Pyrolytic cleaning function (WVEP615, WVEP617 & WVEP627 models only) • Make sure all accessories are removed from the oven including shelves, trays and side racks. • Turn the oven "Function" selector clockwise to select the "Pyro" position. • Use the + or - buttons on the electronic clock to select between a pyrolytic cleaning time of 1:30 hours (light clean) or 2:30 hours (normal clean) for the appropriate level of cleaning. • After 5 seconds from the last change, the oven will begin heating and the "Remaining time" will be displayed. • The pyrolytic cleaning function can be stopped at any time during the cycle by turning the function selector counter-clockwise to the "OFF" position. NOTE: The "Remaining time" does not include cool-down time for the oven. NOTE: The bottom oven does not have the pyrolytic cleaning function. Starting the pyrolytic cleaning function (WVEP618 models only) • Make sure all accessories are removed from the oven including shelves, trays and side racks. • Switch on the appliance by pressing ON/OFF. • Select the pyrolytic cleaning function and press OK. • Press the or symbols to choose between "1hrs 30min" (light clean) or "2hrs 30min" (normal clean) for the appropriate level of cleaning. • Press the "Pyro Accept" button to commence the cleaning process. • The oven will begin heating and the "Remaining time" will be displayed. • The pyrolytic cleaning function can be stopped at any time during the cycle by pressing the ON/OFF. NOTE: The "Remaining time" does not include cool-down time for the oven. During Pyrolytic cleaning When the temperature in the oven approaches 300°C, the door will automatically lock and a padlock symbol will appear on the display. After Pyrolytic cleaning The door will only unlock when the oven has cooled to a safe temperature. Turning the function off will not unlock the door. After cool-down, wipe the ash out of the oven with a soft damp cloth and warm water. To restore the enamel shine to more difficult areas, use a damp cloth with vinegar and detergent. CAUTION: Do not turn off the mains power supply to the oven during the pyrolytic cleaning cycle. This could damage the appliance. Cleaning the cavity well The cleaning procedure removes limestone residue from the cavity well after cooking with steam. WARNING Perform the cleaning procedure at least every 5 EasyBake + Steam cooking cycles. 1. Mix 150ml of tap water with 100ml of white vinegar and put the mix in the cavity well. 2. Let the water and vinegar mix dissolve the limestone residue at the ambient temperature for 45 minutes. 3. Remove the water and vinegar mix with a soft cloth and clean the cavity with warm water and a soft cloth. Cleaning steam parts (WVEP618 model only) After some time, the water tank can accumulate mineral deposits. To prevent this from occurring, empty the water tank after each steam cooking session and clean the water tank every two to three months using the following process. IMPORTANT: During the cleaning procedure, some water can drip from the steam outlet onto the cavity of the oven. Put a dripping pan on the shelf level directly below the steam inlet to prevent water from falling onto the bottom of the oven cavity. Cleaning procedure 1. With the oven turned off, fill the water tank with a cleaning solution of 850mL water and 5g citric acid. Leave the cleaning solution in the water tank for approximately 60 minutes. 2. Turn on the oven and set the oven function to 'Steam cooking'. Set the temperature to 230°C. After 25 minutes, turn off the oven and let it cool for 15 minutes. 3. Again, turn on the oven and set the oven function to 'Steam cooking'. Set the temperature to 180°C. After 10 minutes, turn off the oven and let it cool for 15 minutes. 4. Insert the supplied drain pipe and empty the tank of the remaining cleaning solution. When the tank is empty, remove the drain pipe. 5. To flush the water tank, refill the water tank with 850mL of fresh water and empty via the drain pipe. 6. Remove the drain pipe again and clean it by hand in warm water with soap. 7. To prevent the build up of calcium deposits it is recommended to use this procedure every 2-3 months. Steam Assisted Cleaning function (WVE617 model only) This function assists in the removal of food residue from inside the oven. This method is effective in removing light soiling only. It is not effective in removing stubborn baked-on stains. This function can only be used when the oven is cold. Procedure for cleaning 1. Remove all shelves, dishes and side racks. 2. Make a solution of water (85%), white vinegar (10%), and dish washing detergent (5%) and spray liberally on to door, side walls and back wall of oven cavity. 3. Pour 40ml of water into the cavity base well. 4. Close the door. Set the function to Steam Assist Clean and set the temperature to 120°C. 5. Turn oven OFF after 18 minutes. 6. Allow to cool to a safe level before wiping surface with a wet cloth. TROUBLESHOOTING Heating elements not working Power not switched on + Check cooktop is plugged in and power is on Controls incorrectly set + Check correct knob turned for element Household fuse blown + Replace household fuse. If the fuse continues to blow, contact the Service Centre Benchtop becoming too hot and/or beginning to discolour Wrong type of cooking pot + Make sure bases are not concave Pot may overhang the cooktop + Place pot on centre of element so that it does not overhang Pot is too large + Use a smaller pot Food taking too long to cook Pot base is not flat + Make sure pot base is flat or slightly convex Pot may be off centre + Centre pot over element making sure it does not overhang the cooktop Need to use a larger element + Move pot to a larger element Using a round based wok + Use a flat based wok on electric cooktops Controls are incorrectly set + Check controls are set correctly and increase if necessary Cannot simmer food Control set too high + Turn control to lower setting Element too large + Use a smaller element Elements giving off smoke or odours when first used Protective oils being removed in first cooking + Do not worry, this is normal Glass surface becomes milky white when pot is removed Base of pot is concave + Use a flat based pot Oven or grill not working + Time of day not set. + Power not turned on. + Controls are incorrectly set. + Oven is in Demo' mode, refer to Using your oven section. + Household fuse has blown or power supply is off. NOTE: If the household fuse continues to blow, call the Customer Care Centre. + Child-proof oven lock is activated. LOCKED' is displayed when control is touched. (Refer to Using your oven section) The oven seal is loose + The oven seal is only attached at each corner. It may seem like a loose fit but when the oven door is closed it will function correctly. Oven light not working + Light may be turned off at control panel. + Lamp blown or loose in socket. + Household fuse has blown. NOTE: If the household fuse continues to blow, call the Customer Care Centre. Oven not heating enough + Foil or trays on bottom of oven. + Timer is in "AUTO" mode. (Refer to timer operating instructions) + Household fuse has blown. NOTE: If the household fuse continues to blow, call the Customer Care Centre. + Oven not pre-heated. Pre-heat oven for 30 minutes. Clock flashing on display + Reset time of day and any cooking functions you were using. Unit smoking when first used + Protective oils being removed. Condensation build up + Reduce the amount of water used in cooking. (Sometimes condensation is normal) Door cannot be replaced after removal + Stirrup not engaged properly. Functions and temperature appear on display but oven does not work + Oven is in Demo' mode, refer to Using your oven section. When the door is open the fan stops (underbench only) + This is a function of the power board to help reduce the blast of air when opening the door. When anon fan mode is selected the fan starts + Most oven modes have a fast heat up function that uses the fan, fan element and top (boost) elements. Auto fast heat up can be overridden by selecting a temperature of 120°C or less, allowing the function to start, then increasing the temperature to the desired level. The light stays on when the door is closed + An oven function has been selected. + The light has been turned on at the control panel. The light does not turn "ON" when the door is opened + Oven light may need replacing. Shelf or telescopic runner slides out when door is opened + Oven cavity is not level. you can perform a check using a level to verify this (refer to installation section). If not level refer to installer. NOTE: Only authorised personnel should carry out servicing Page 2